

SET UP:


After removing cardbox just lift up upper part and lock it with 2 butterfly latches. On stand just push down plank with rubber on top.

ATTENTION!!!

Inside the drawer is a security screw. The screw must be tightened between the drawer and the top of the darts from drawer space!

The middle leg can be rotated by 180 degrees for stability.

PUSHBUTTONS

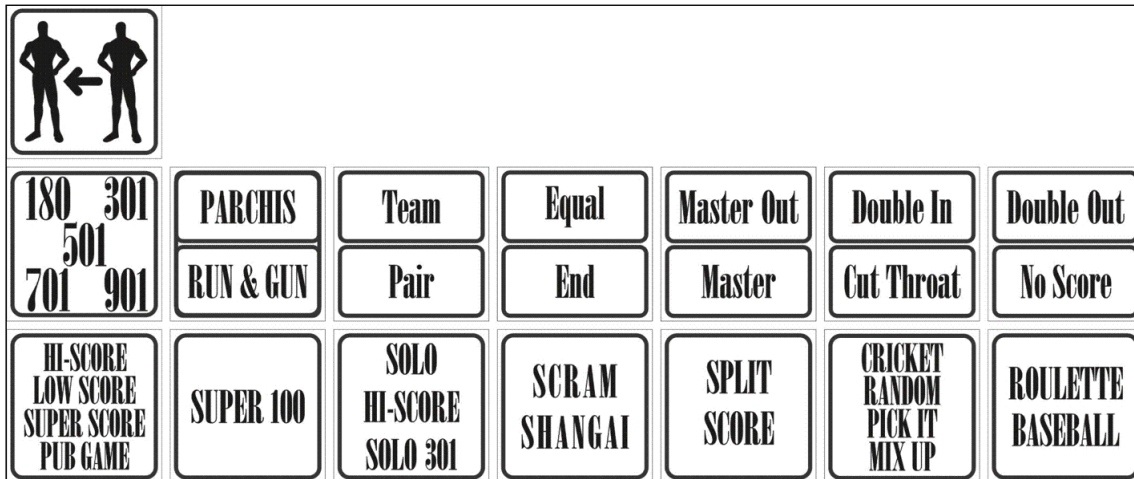

SKIP ROUND

When a player should skip round, he must hold Players button 3 seconds.

GAME ENDING

When you want to end game just press the buttons Hi Score/LowScore/SuperScore/Pub Game i Super 100 with buttons Cricket i Roulette/Baseball at same time (first two and last two pushbuttons in bottom line). Notice: Green lamp must lite, that does not work while red lamp is lit.

FIRST DARTS RETURN

Players can return a first darts in every round by pressing Hi Score/LowScore/SuperScore/Pub Game and Scram/Shangai at same time. This option is useful when player while removing darts activate sensor of missed darts or press any target number accidently.

X DARTS